


SUSTAINIAC® STEALTH PRO DRY RUN "QUICKIE" INSTALLATION

Simple, fast, basic hookup to evaluate Sustainiac performance in a guitar

DRIVER POLARITY: If you don't get mostly fundamentals in NORMAL mode, then reverse the red/black driver wires. It means that your bridge pickup has reverse polarity from most bridge pickups.

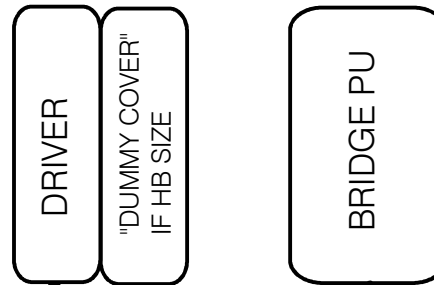

NOTES:

1. This quickly allows you to evaluate a guitar to see if there might be magnetic compatibility problems.
2. Sustainiac board and wire harness should be kept away from the cavity to prevent crosstalk to guitar signal wires and contacts.
3. Keep orange/white wires of the 8-pin connector away from the Sustainiac board, also away from violet/gray wires.

