



Sustainiac® STEALTH PRO  
sustainer  
STRAT® installation  
(also SHREDDER installation)  
8-07

KEEP WIRES AS SHORT AS POSSIBLE. For Strats, place circuit and wires as shown.

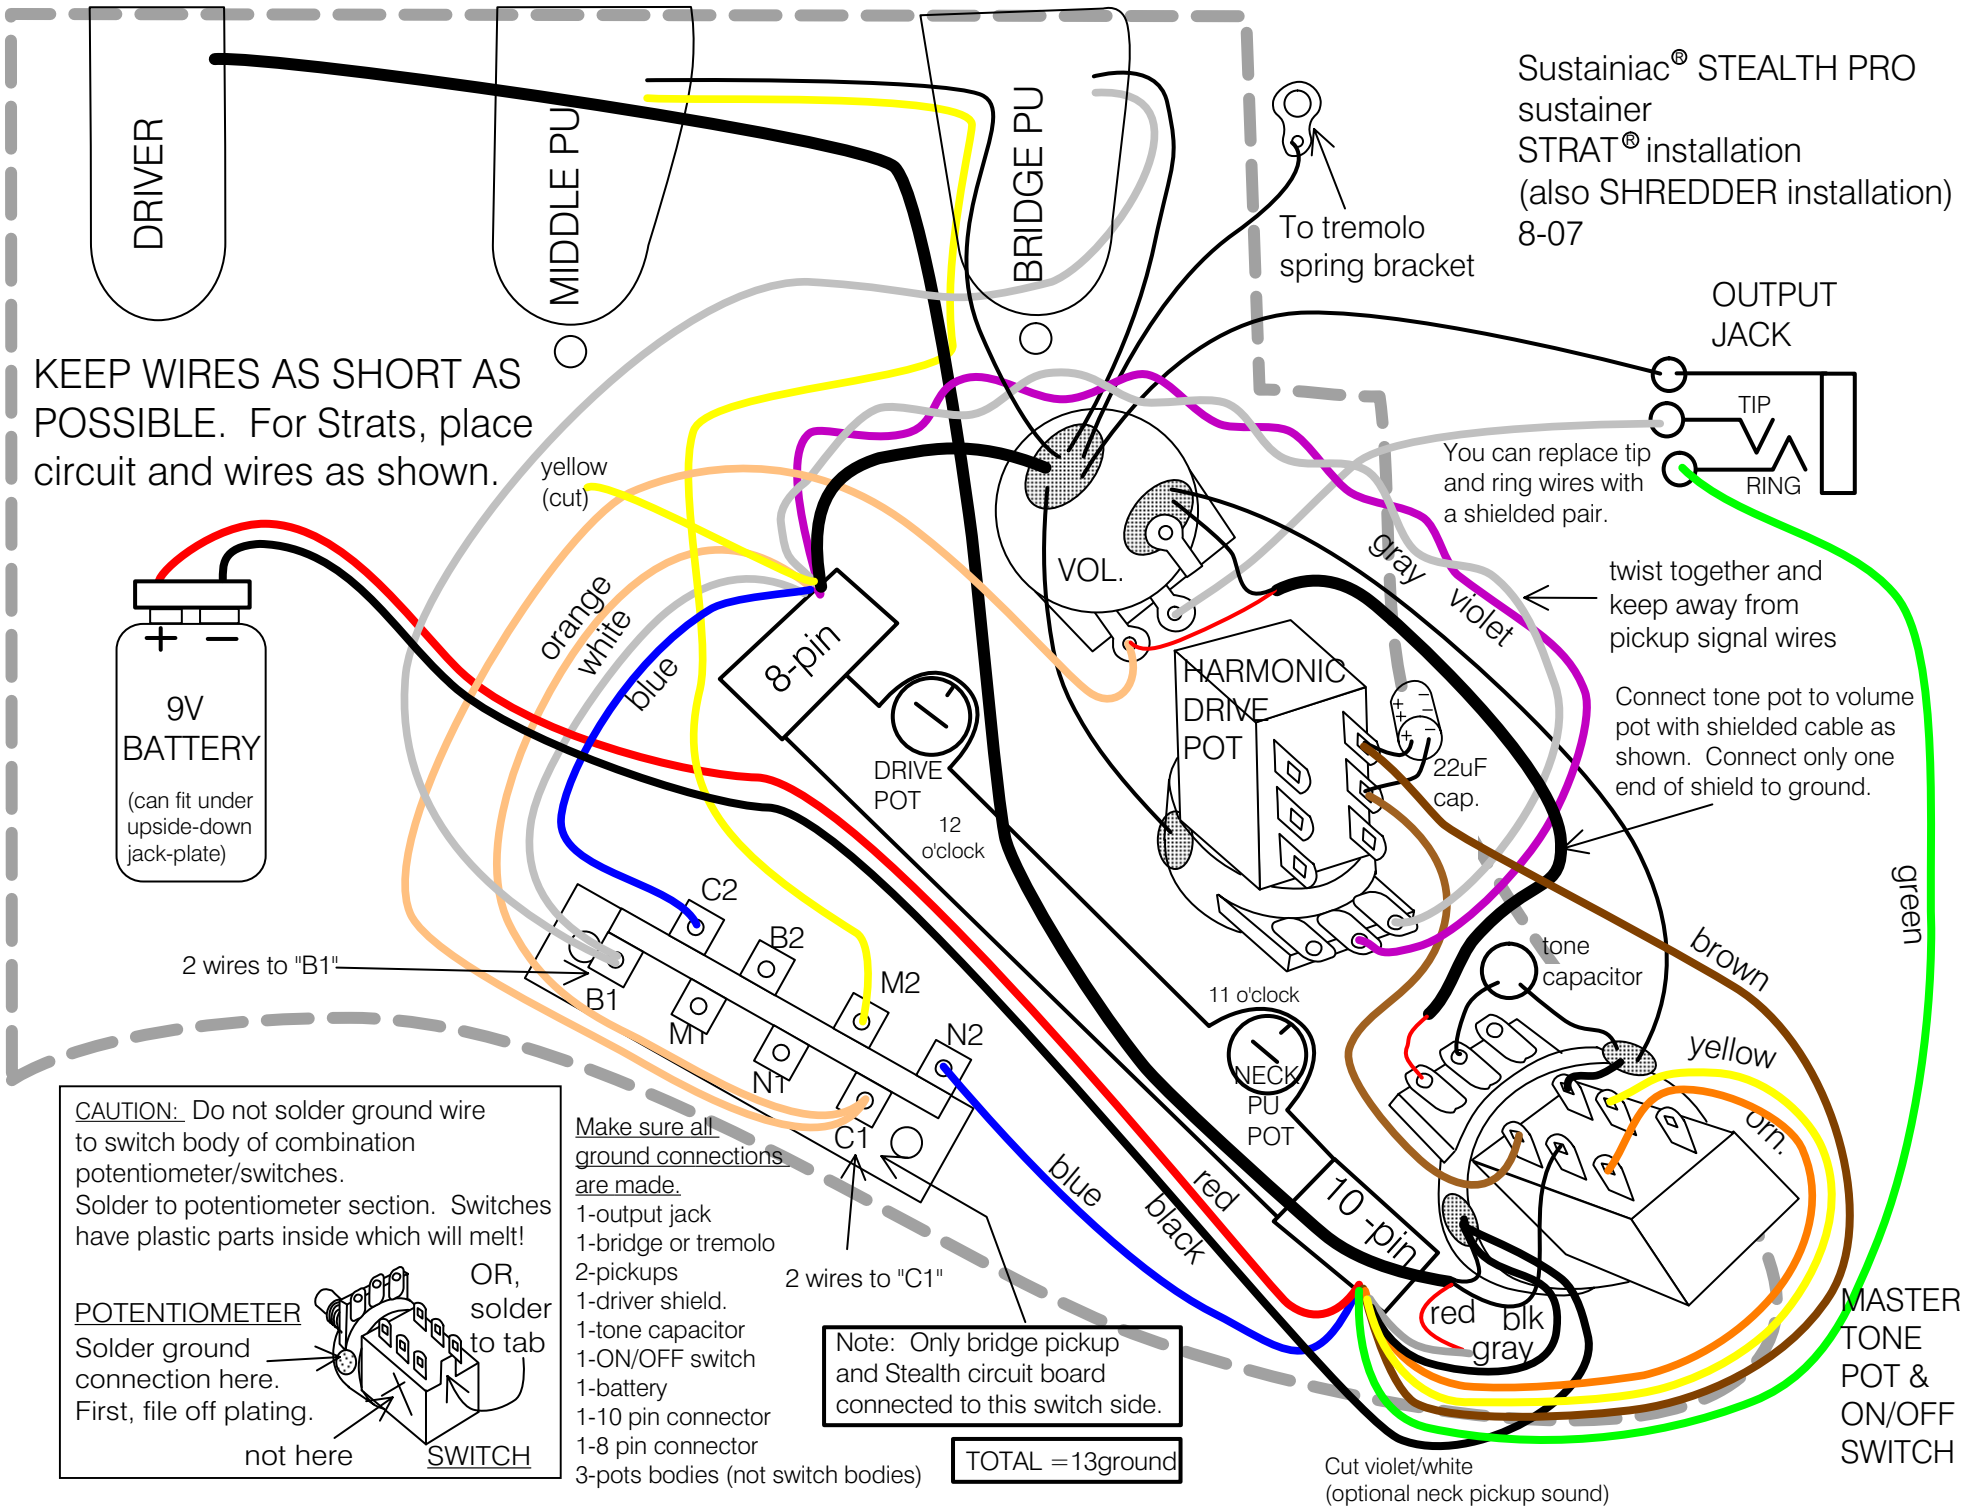

9V BATTERY  
(can fit under upside-down jack-plate)

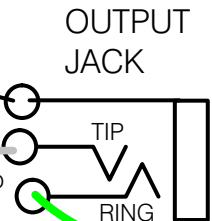

**CAUTION:** Do not solder ground wire to switch body of combination potentiometer/switches. Solder to potentiometer section. Switches have plastic parts inside which will melt!

**POTENTIOMETER**  
Solder ground connection here. First, file off plating.

OR, solder to tab

**SWITCH**  
not here

- Make sure all ground connections are made.
- 1-output jack
  - 1-bridge or tremolo
  - 2-pickups
  - 1-driver shield.
  - 1-tone capacitor
  - 1-ON/OFF switch
  - 1-battery
  - 1-10 pin connector
  - 1-8 pin connector
  - 3-pots bodies (not switch bodies)

Note: Only bridge pickup and Stealth circuit board connected to this switch side.

TOTAL = 13ground

Cut violet/white (optional neck pickup sound)

MASTER TONE POT & ON/OFF SWITCH