


Sustainiac® STEALTH PLUS
Strat® 2-HB installation 12/04
with toggle controls

KEEP WIRES AS SHORT AS POSSIBLE. For Strats, place circuit and wires as shown.

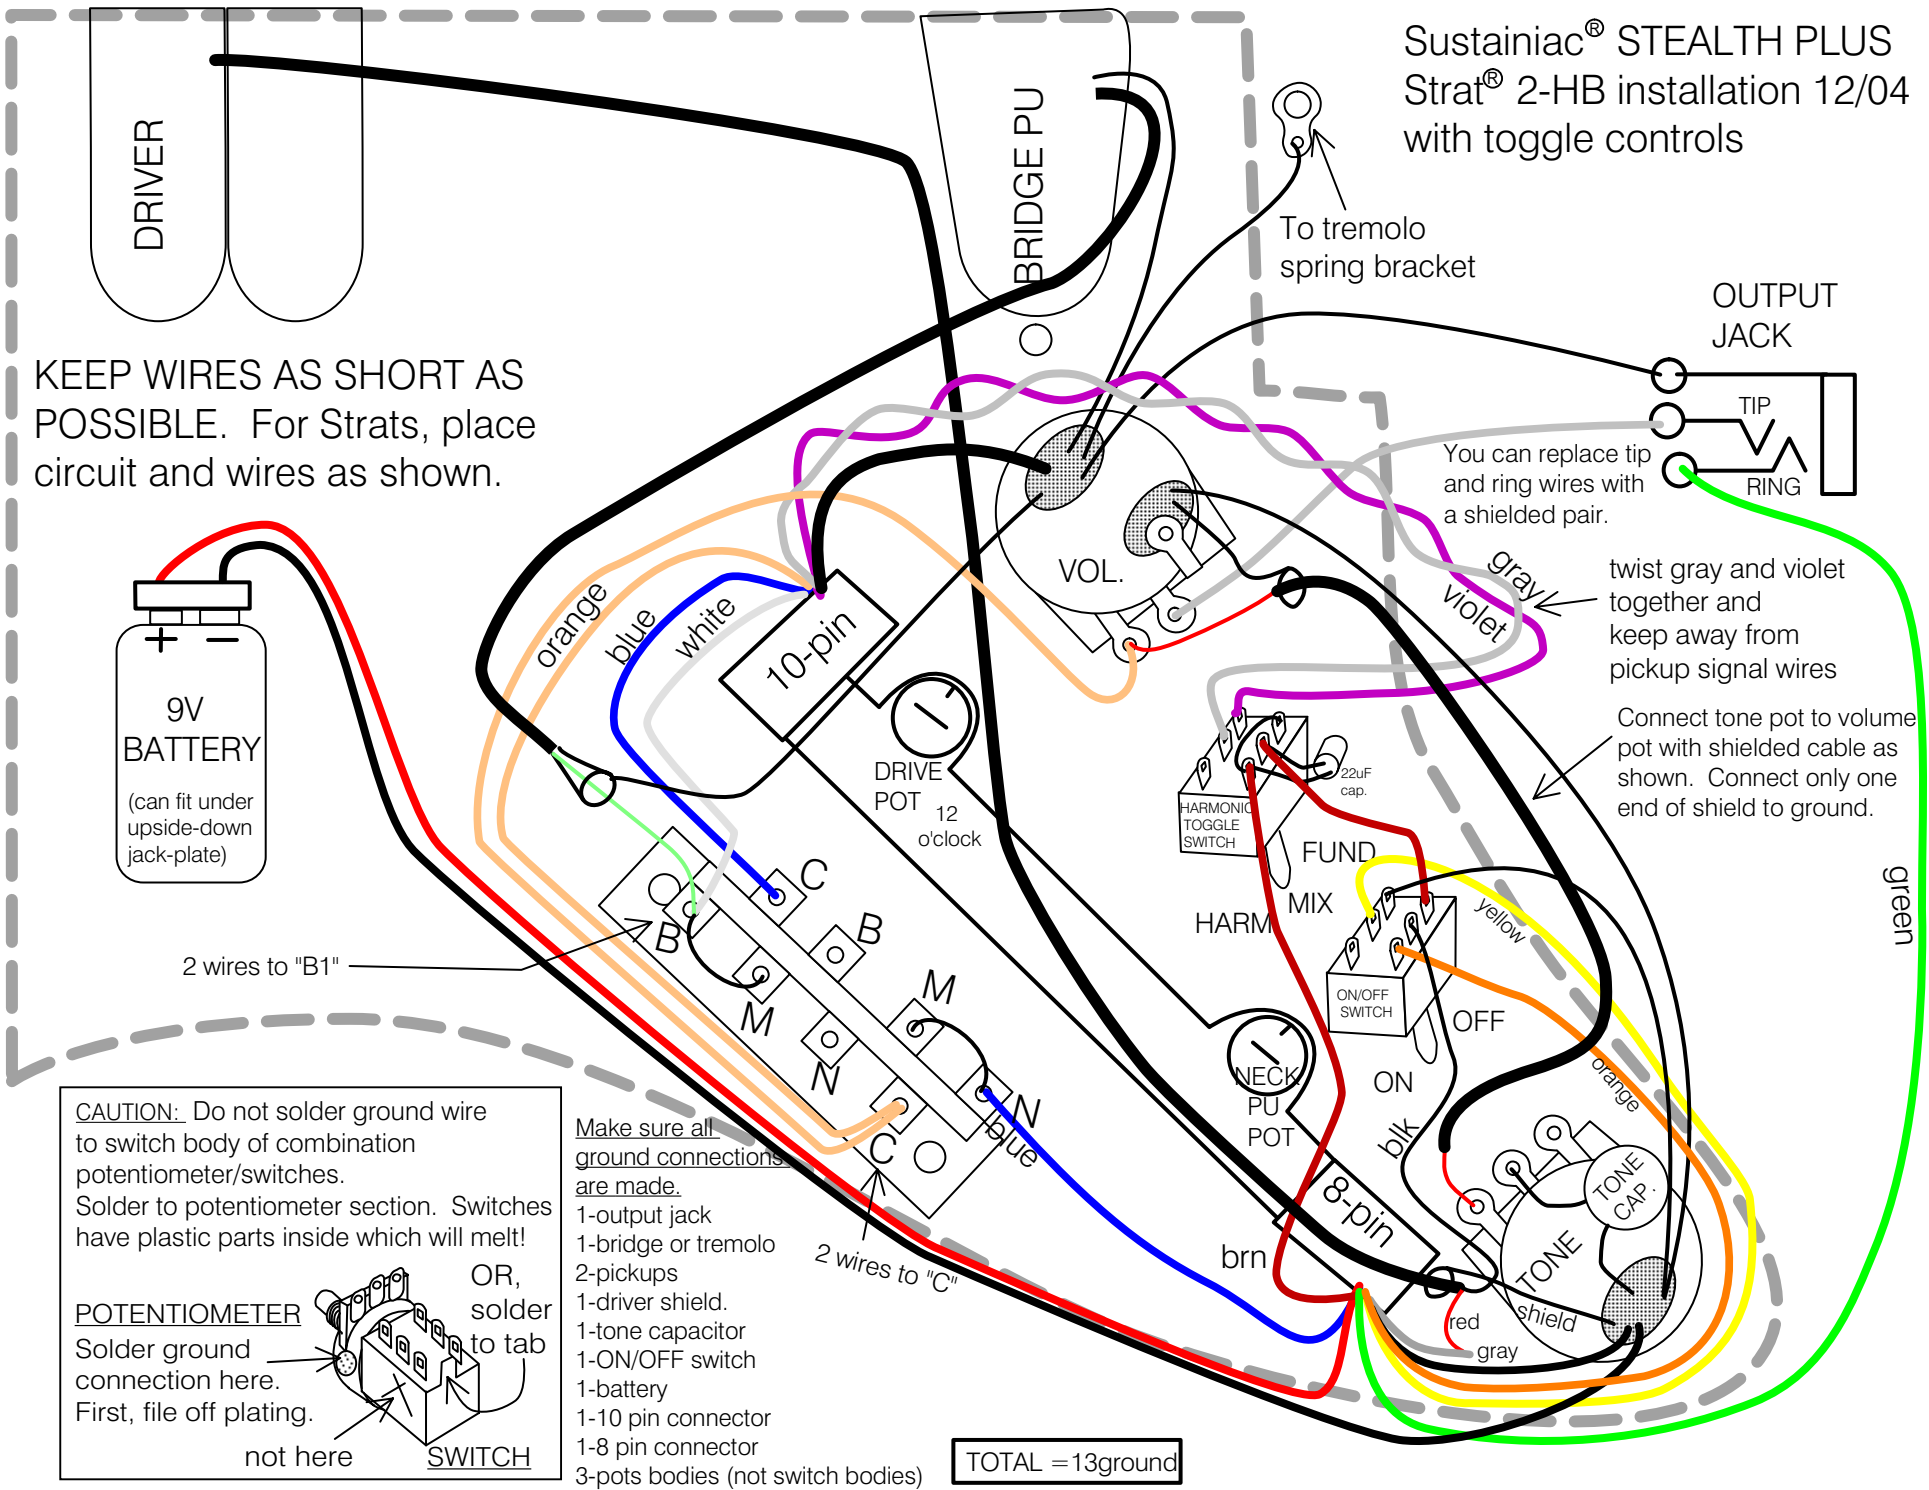

9V BATTERY
(can fit under upside-down jack-plate)

2 wires to "B1"

2 wires to "C"

CAUTION: Do not solder ground wire to switch body of combination potentiometer/switches. Solder to potentiometer section. Switches have plastic parts inside which will melt!

POTENTIOMETER
Solder ground connection here. First, file off plating.

OR, solder to tab

not here

SWITCH

- Make sure all ground connections are made.
- 1-output jack
 - 1-bridge or tremolo
 - 2-pickups
 - 1-driver shield.
 - 1-tone capacitor
 - 1-ON/OFF switch
 - 1-battery
 - 1-10 pin connector
 - 1-8 pin connector
 - 3-pots bodies (not switch bodies)

TOTAL = 13ground